Qty -041	Part Number	Description
Х	D3288-041	SKIDTUBE ASSEMBLY
1	D2600-1-240	EXTRUSION
1	D2646	AFT CAP
1	D2647	CAP
9	D2649	CROSS BOLT SPACER
6	D3275-1	CROSS BOLT SPACER
2	D3286-1	DOUBLER
2	D3286-3	SPACER
1	D3289-041	FLOAT WEB
1	D3413-1	RING
1	D3415-041	NUT PLATE
1	D4956-15	WEARSHOE
1	D4956-21	WEARSHOE
1	D4956-35	WEARSHOE
1	D4956-41	WEARSHOE
7	D3537-1	WEARPAD
1	D3537-3	WEARPAD
12	D3683-1	INSERT
64	ALS7-1032-130	INSERT (or AKS4-1032-130, ALS4-1032-130, AELS-1032-130)
66	AN3C4A	BOLT
1	AN4C5A	BOLT
1	AN960C416	WASHER
78	AN960C10L	WASHER
2	CCR264SS3-3	RIVET
2	CR3212-4-03	RIVET
52	CR3212-4-04	RIVET
12	MS27039C1-05	SCREW (or AN3C3A BOLT)
2	NAS1515H3L	WASHER

GENERAL NOTES:

- 1. MATERIAL: N/A
- 2. FINISH: ACID ETCH, ALODINE ASSEMBLY PER DART QSI 005 4.1
 - PRIME (REF. 4.2.1.3.3) AND PAINT WHITE PER DART QSI 005 4.2
- 3. TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4. UNITS: INCHES UNLESS OTHERWISE NOTED
- 5. BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 6. IDENTIFICATION: NONE
- 7. WEIGHT: 20.8 LBS
- 8. DAMAGE TOLERANCE ON FWD BEND:

THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 5 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020 DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.

- 9. BOND D3289-041 FLOAT WEB INTO D3288-1 OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241/291 ADHESIVE PER DART QSI 015. ENSURE HOLES LINE-UP.
- 10. ALL HOLES DRILLED ON CENTERLINES EXCEPT WHERE SHOWN.
- 11. DRILL Ø0.297 HOLES FOR D3683-1 INSERTS BEFORE FINISH. INSTALL D3683-1 INSERTS AFTER FINISH.
- 12. DRILL Ø0.297 HOLES FOR ALS7-1032-130 INSERTS USING DT3288-1T2 BEFORE FINISH. INSTALL ALS7-1032-130 INSERTS AFTER FINISH. SEAL WEARSHOE BOLTS WITH SIKAFLEX -241/-291.
- 13. WELDING: PER DART QSI 004.
- 14. COAT ALL EXPOSED FASTENERS WITH LPS LABORATORIES "LPS PROCYON" AFTER FINAL ASSEMBLY, CLEAN OFF EXCESS GREASE WITH WASH 'N WIPE DEGREASER



ı		-XX WAS D353 VE GASKETS I	5-XX, PER IIN-D206-642 REV Q	DB	14.04.15] [
Н			SH NOW PRIME/PAINT REF. PAR13-256	DW	13.05.21]
G		RMAT DWG, RM BORE & ADD	Ĉ	09.06.17		
F		TTUTE FLOAT LS7-1032-130;	DC	07.11.21		
E	MID-FLOAT HOLES WERE MOVED 2.00" FWD AND ROTATED INBOARD AND OUTBOARD BY 17° MB 07.09.14 INSERTS ARE NOW INSTALLED AT THESE LOCATIONS					
D	DIMEN	SIONS ADDED		DC	07.06.04]
С	NEW I	NSERTS, SS W	EARSHOES AND GASKETS	PH	06.12.19	1
В	CHANG	E INSERTS		CP	05.03.18	1
Α	NEW ISSUE			CP	04.05.17	1
REV.	DESCRIPTION			BY	DATE	1
DESIGN CP		CP	DART AEROSPACE LTD		LTD	1
DRAWN DB		DB	HAWKESBURY, ONTARI			1
CHECKED		Dω	DRAWING NO.		REV.	1
MFG. APPR.		1	D3288		SHEET 1 OF 4	
APPROVED		JAH .	TITLE		SCALE	1
DE APPR.			SKIDTUBE ASSEMBLY		NTS	
DATE 14.04.15			COPYRIGHT © 2004 BY DART AEROSPACE LTD THS DOQUMENT IS PRIVATE AND COMPRISHTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR CO-OPED ON COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERSUSSION FROM DART AEROSPACE LTD.			

14.0

2


1


8

•


ì

5

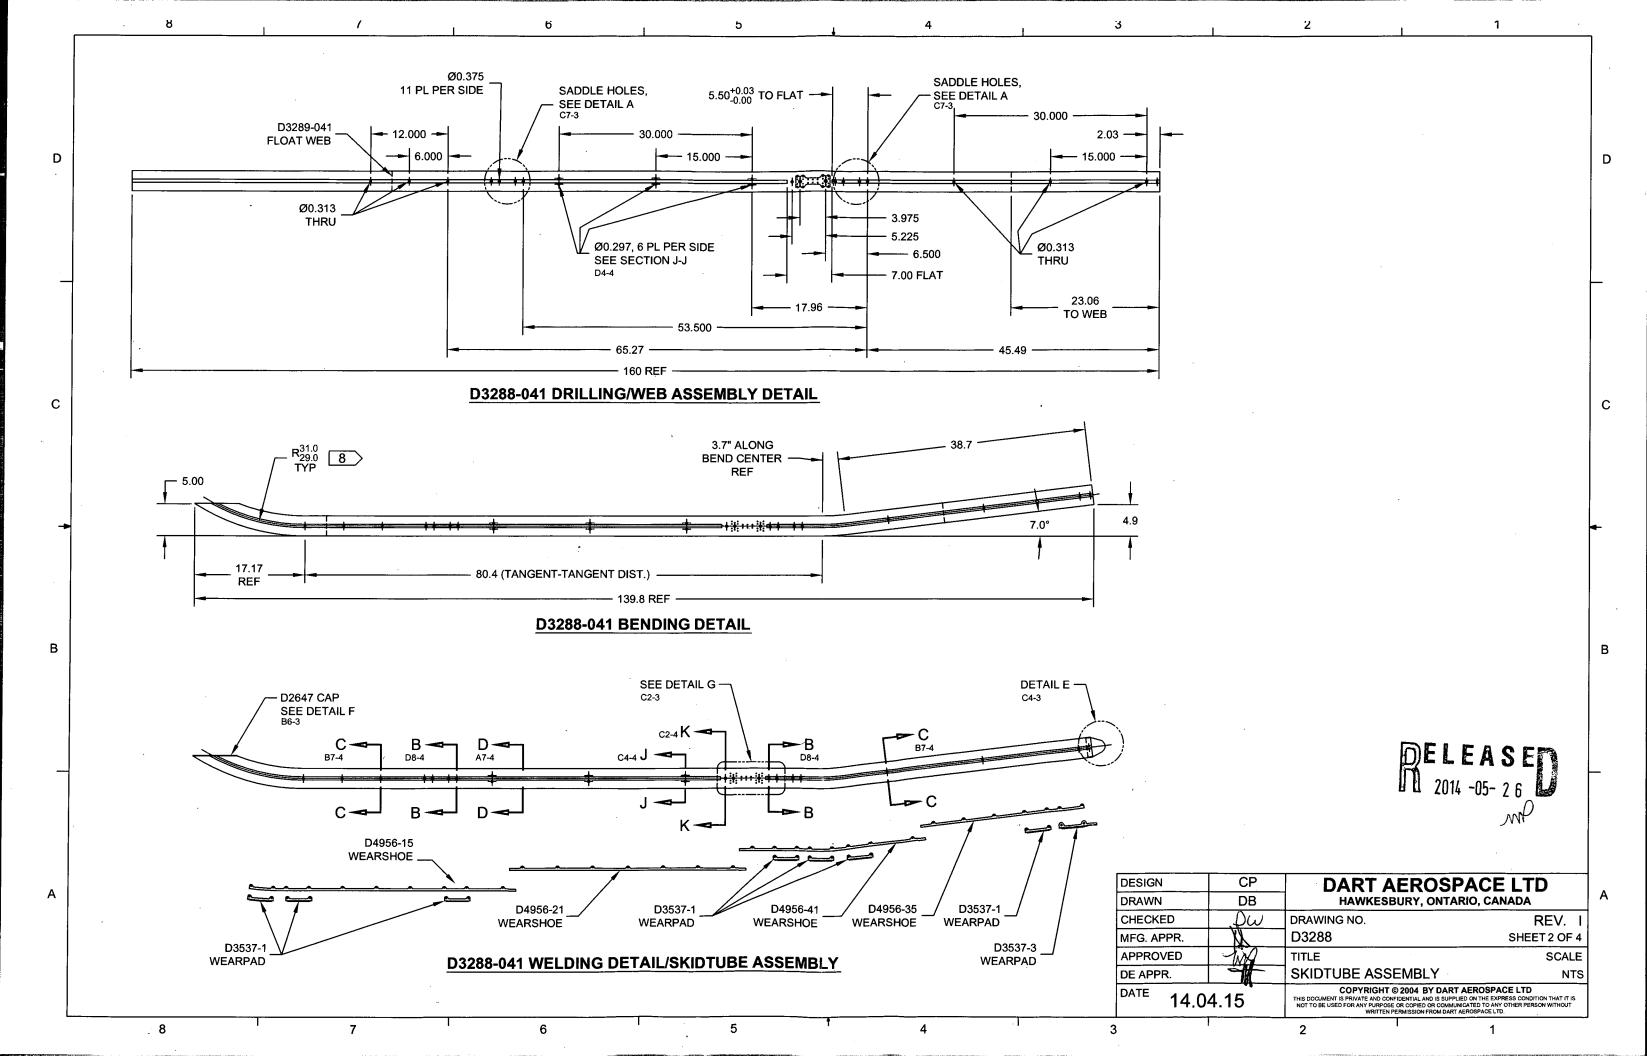

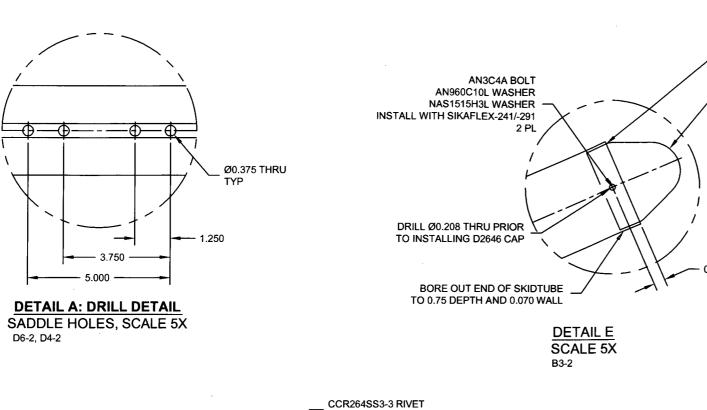

DRILL #30 CSK Ø0.229x100° INSTALL CR3212-4-04 RIVET 26 PL PER DOUBLER D3286-1 DOUBLER 1 PL PER SIDE C2-4 K ENLARGE TO Ø0.500 IN D3286-1 ENLARGE TO Ø0.625 IN TUBE 2 PL PER SIDE DETAIL G SCALE 5X

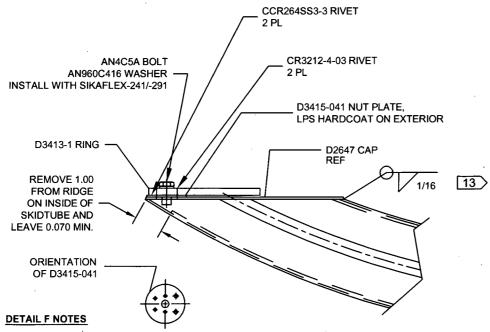

- 1. CUT TUBE LEVEL
- 2. REMOVE RIDGE ON FWD SIDE
 3. LOCATE D2647 (TRIM AS NECESSARY)
- 4. WELD D2647 IN PLACE PER DART QSI 004
- 5. GRIND FLUSH
 6. RIVET D3415-041 NUT PLATE IN PLACE NOTE: MASK THREADS IN D3415-041 PRIOR TO FINISH

DETAIL F: END FINISHING DETAIL

SCALE 5X

DESIGN	СР	CE LTD	
DRAWN	DB	HAWKESBURY, ONTARIO, CANADA	
CHECKED	DW	DRAWING NO.	REV. I
MFG. APPR.	M	D3288	SHEET 3 OF 4
APPROVED	M	TITLE	SCALE
DE APPR.		SKIDTUBE ASSEMBLY	NTS
DATE 14.0	4.15	COPYRIGHT © 2004 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

6

С

D


C

Α

SEAL WITH

D2646 CAP

SIKAFLEX-241/291

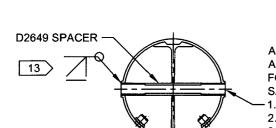

D

В


Α

AFTER DRILLING AND BENDING ASSEMBLY, PERFORM THE FOLLOWING FOR Ø0.375 SADDLE HOLES ONLY: 1. CHAMFER HOLE 0.030x45°

- 2. INSERT D2649 SPACER
- 3. WELD INTO PLACE AND GRIND FLUSH
- 4. C'BORE TO Ø0.313x0.75 DEEP


SECTION B-B

FOR Ø0.375 SADDLE HOLES ONLY 8 PL, SCALE 5X B7-2, B5-2, D1-3

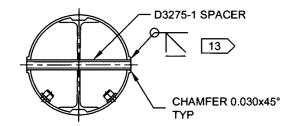


SECTION C-C

FOR Ø0.313 HOLES ONLY 6 PL, SCALE 5X

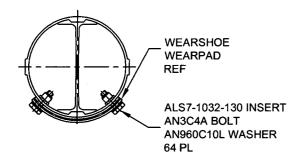


12 SECTION D-D

FOR WEARSHOES INSTALL ONLY 32 PL, SCALE 5X B6-2

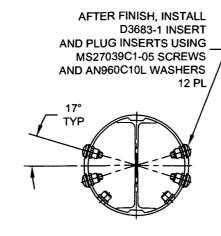


SECTION J-J SCALE 5X D5-2, B6-2

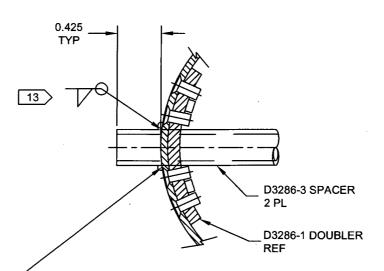

TO INSTALL D3286-1/-3:

- 1. GRIND OFF FLANGE IN AREA SHOWN, FLUSH WITH ROUND TUBE
- 2. LOCATE & DRILL D3286-1 DOUBLER USING DT3286-1T1
- 3. ENLARGE HOLES IN D3286-1 TO Ø0.500
- 4. ENLARGE HOLES IN TUBE TO Ø0.625
- 5. RIVET D3286-1 TO TUBE
- 6. INSERT D3286-3 SPACER
- 7. WELD IN PLACE AND GRIND FLUSH

SECTION H-H NOT TO SCALE D3-3

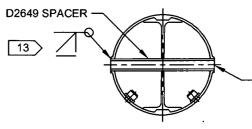

AFTER DRILLING AND BENDING ASSEMBLY, PERFORM THE FOLLOWING FOR THIS HOLE ONLY: 1. CHAMFER HOLE 0.030x45°

- 2. INSERT D2649 SPACER
- 3. WELD INTO PLACE AND **GRIND FLUSH**

SECTION K-K 1 PL, SCALE 5X B5-2

DESIGN	CP	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	DB		
CHECKED	,Dω	DRAWING NO.	REV. I
MFG. APPR.	1	D3288	SHEET 4 OF 4
APPROVED	W.	TITLE	SCALE
DE APPR.	-4	SKIDTUBE ASSEMBLY	NTS
DATE 14.04.15		COPYRIGHT © 2004 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	